

Installing on Windows Vista and Windows 7

If you received an update and Shopcam is installed and running, there is no need to do a complete install. See the 'Simple update' below. For new installs, continue below.



New install for Windows 7 and Vista



You will need to make sure you are using the new installation program.

This blue screen on the left (Figure 1) is the installation program you will need. The one on the right is for older operating system. The new install will work with with XP



Old install for XP install

When you run the install, make sure you run it as administrator. The easiest ways to accomplish this is to 'right-click' on shopcam_setup.exe and select [Run as Administrator] from the drop down.

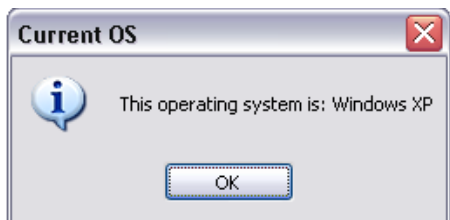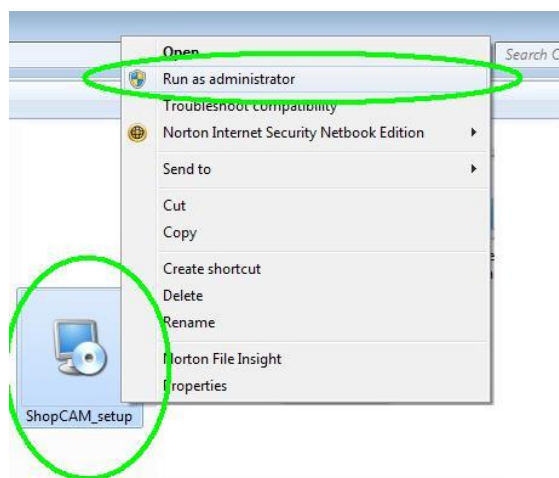

After launching the install, a couple dialog boxes will appear to reaffirm which operating system and user privileges you have. If you do not have administrator



privileges, you will not be able to properly install Shopcam. Contact your IT personnel and make sure they make it available to all users.

Simple Update

If you received a CD and currently have the system installed and running, you do not need to reinstall everything. You should select [Update only]. You can also select the included posts. You may also use this to install the USB drivers if you have a Hardware key.

